

Customer Vehicle Maintenance

Aptean Ltd
Copyright © 2011-2026.

Contents

1 Customer Vehicle Maintenance.....	1
1.1 Details section.....	2

1 Customer Vehicle Maintenance

This is the customer vehicles fleet maintenance screen.

This screen allows you to maintain the customer vehicles in the system. You can create vehicles and assign to customers and customer locations.

Further, this screen allows you to maintain the fleet, searching for vehicles by customer and location, within or outside your planning group, with actions or inspections outstanding.

Vehicle Fleet Maintenance												
Vehicle Id	Vehicle Type	Vehicle Description	Vehicle Status	Vehicle Model	Config Id	Customer	Customer Group	Location	Planning Region	Last Inspection	Inspection Required	Action Outstanding
AM13012	VAN		GENERIC	GENERIC	GT7					N	N	
AJ40011	TRAILER	GENERIC	GENERIC	GENERIC	GENERIC					N	N	
AM13013	TRACTOR	GENERIC	GENERIC	GENERIC	GENERIC					N	N	
BU09111	VAN	VOLKSWAGEN CADDY 1.6 16V 80	GENERIC	GENERIC	GENERIC					N	N	
CB09114	VAN	PEUGEOT BOXER 1.6 HDI	GENERIC	GENERIC	GENERIC					N	N	
FT205	TRAILER	GENERIC	GENERIC	GENERIC	GENERIC					N	N	
FT207	TRAILER	GENERIC	GENERIC	GENERIC	GENERIC					N	N	
FT208	TRAILER	GENERIC	GENERIC	GENERIC	GENERIC					N	N	
GM09111	VAN	Fiat Doblo Cargo Multijet 1.3	GENERIC	GENERIC	GENERIC					N	N	
GR08101	TRACTOR	GENERIC	GENERIC	GENERIC	GENERIC					N	N	
GR08101	TRACTOR	GR08-01-TRACTOR	GR08-00-TRACTOR	GR08-00-TRACTOR								
GR08102	TRACTOR	GR08-02-TRACTOR	GR08-00-TRACTOR	GR08-00-TRACTOR								
GR08103	TRACTOR	GR08-03-TRACTOR	GR08-00-TRACTOR	GR08-00-TRACTOR								
GR08104	TRACTOR	GR08-04-TRACTOR	GR08-00-TRACTOR	GR08-00-TRACTOR								
GR08105	TRACTOR	GR08-05-TRACTOR	GR08-00-TRACTOR	GR08-00-TRACTOR								
GR08106	TRACTOR	GR08-06-TRACTOR	GR08-00-TRACTOR	GR08-00-TRACTOR								
GR08107	TRACTOR	GR08-07-TRACTOR	GR08-00-TRACTOR	GR08-00-TRACTOR								
GR08108	TRACTOR	GR08-08-TRACTOR	GR08-00-TRACTOR	GR08-00-TRACTOR								
GR08109	TRACTOR	GR08-09-TRACTOR	GR08-00-TRACTOR	GR08-00-TRACTOR								
GR08110	TRAILER	GR08-10-TRAILER	GR08-00-TRAILER	GR08-00-TRAILER								
GR08111	TRACTOR	GR08-11-TRACTOR	GR08-00-TRACTOR	GR08-00-TRACTOR								
GR08112	TRACTOR	GR08-12-TRACTOR	GR08-00-TRACTOR	GR08-00-TRACTOR								

Configurations

The search panel is on the left of the screen - you can choose to find data using the following criteria:

- *Vehicle Id*
- *Vehicle Type* - a drop-down list of the vehicle types.
- *Vehicle Description*
- *Customer* - you can enter a partial customer code, or you can use the lookup provided with the  **Lookup** button.
- *Planning Region* - tick this box to limit to those vehicles in locations that are only for your planning group.
- *Location* - you can enter a partial customer code, or you can use the lookup provided with the  **Lookup** button.
- *Action Outstanding* - tick this box to limit the vehicles to only those with outstanding actions against them.
- *Inspection Required* - tick this box to limit the vehicles to only those that have not had an inspection in the current period.

You can choose to display data as follows using the  **Column Selector** button:

- *Vehicle ID*.
- *Customer Id*:
- *Customer*
- *Vehicle Type*.
- *Vehicle Description*.
- *Vehicle Make*.
- *Vehicle Model*.
- *Config ID*.
- *Parent Code*
- *Parent*
- *Location*.
- *Planning Region*.
- *Last Inspection*.
- *Inspection Required*.
- *Action Outstanding*.
- *Carrier Code*
- *Based At*

The following actions are available on the Details panel:

-  **New** - create a new record.
-  **Save** - save a new record or changes to an existing record.

Ready for **What's Next, Now™**



- **Delete** - delete an existing record.
- **Fleet Inspection** - create a fleet inspection job for vehicles registered at this location.
- **Help** - help on this screen.
- **Undo** - Undo any changes since last save.
- **Clear** - clear all fields.
- **Toggle** - toggle display of all accordion headers.

If you want to create a fleet inspection for vehicles at this vehicle's location, then you can click the **Fleet Inspection** button. The screen will take you to the Call Logging screen and create an order for you for this vehicle at this location with most details pre-configured for you, to book this with the customer.

You can select an existing vehicle to edit the details, and you can add a vehicle by opening the Details panel on the right and clicking the **New** button.

1.1 Details section

Vehicle Fleet Maintenance

Vehicle Details

Vehicle ID	Customer
Vehicle Type	Tractor
Description	Mercedes-Benz SPRINTER 313 CDI
Vehicle Make	Mercedes-Benz
Vehicle Model	SPRINTER 313 CDI
Config ID	Mercedes-Benz SPRINTER 313 CDI

Assignments

Customer	Location	Availability	Action
HYDER	Hyder LTD - Rental & Workshop	Available	

Axes

Axle ID	Tyre Size	Rec. Pressure	Action
A	315/70R22.5	80	
B	315/70R22.5	80	

Tires

Details panel

- **Customer** - the customer, through a lookup.
- **Vehicle ID** - the vehicle ID.
- **Vehicle Type** - the type, from a drop-down list.
- **Vehicle Description** - the description.
- **Vehicle Make** - the make.
- **Vehicle Model** - the model.
- **Config ID** - the vehicle axle configuration from a drop-down list.

Once created, you can change or assign the vehicle to customer locations using the Assignments section **New** button.

An Assignments section will be displayed to enter assigned location details.

1.1.1 Assignments section

This section displays all locations to which the vehicle has been assigned. The section displays the following information:

- **Customer**.
- **Location**.
- **Availability**.

You can edit the assigned location using the **Edit** button, and delete the registered location using the **Delete** button provided against that line.

You can add a registered location using the **New** button in the Assignments section. When you add or edit a location assignment, the screen will pop open a section to add or edit the details with the following details:

- **Location** - the customer location, through a lookup.



- **Availability** - a drop-down list of whether the vehicle is available for that customer location.  **Note:** The vehicle can be available at only one location.


When changes have been made, you can use the following buttons on the section header:

-  **Save** - save a new record or changes to an existing record.
-  **Clear** - clear all fields.

When creating a new vehicle, the vehicle axles and tyres are generated automatically from the axle configuration selected.

1.1.2 Axles section

This section displays all axles on the vehicle.

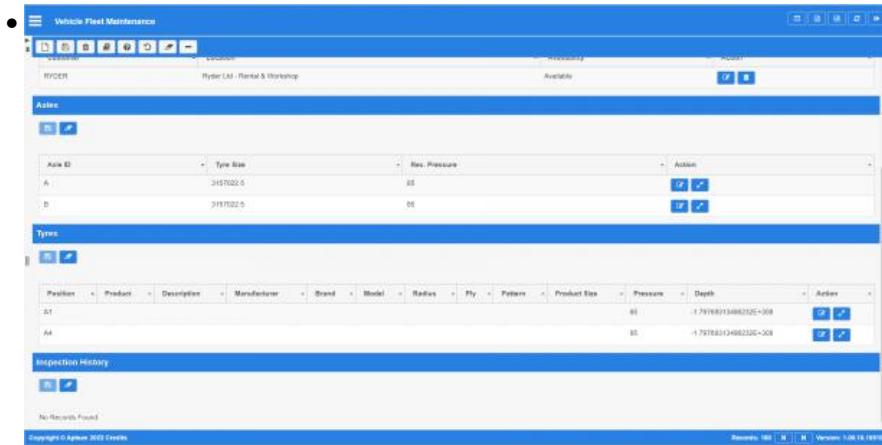

Axles and Tyres panels

You can see the tyres on the axle by clicking the  **Tyres** button - the tyres will be shown in the Tyres section below.

- **Axle ID**
- **Tyre Size**
- **Recommended Pressure**

You can edit the recommended tyre size and pressure using the  **Edit** button.

1.1.3 Tyres section

The Tyres section shows the following information:

- **Position.**
- **Product.**
- **Description.**
- **Manufacturer.**
- **Brand.**
- **Model.**
- **Radius.**
- **Ply.**
- **Pattern.**
- **Product Size.**
- **Pressure** - last recorded pressure.
- **Depth** - last recorded tread depth.

You can see a history of all inspections on the tyre by clicking the  **Inspection History** button against the tyre. You can edit the pressure and tread depth using the  **Edit** button.



1.1.4 Inspection History section

The Inspection History section initially shows all incomplete inspections over a 30-day period.

The details displayed in this panel can be changed using the criteria:

- *Status* - a drop-down list allowing you to select Incomplete, Pending, In Progress, Complete Cancelled or All.
- *Date* - a drop-down list of the period to display, selecting from Last 30, 60 or 180 days.

The section displays the following information:

- *Service Date* - the date and time this position was inspected.
- *Pos.* - the tyre position.
- *Details* - a **Details** button to pop up the details captured against this tyre on the inspection, including:
- *Status* - the status of the inspection, if any actions have been identified against the tyre.
- *Action* - any action to take captured against the tyre when inspected.
- *Action Ref* - the reference of any scheduled callout booked against this action.
- *Action Status* - the status of the scheduled callout booked against this action, if any.
- *Notes* - any noted captured or entered against the inspection.

The screen will show the following information when you press the **Details** button:

- *Product*.
- *Pressure*.
- *Depth*.
- *New/ Remould*.
- *Regrooved*.
- *Reference* - the internal order number on which the inspection was completed.
- *Authority*
- *Resolution* - any resolution details.
- *Planned Delivery*
- *Actual Delivery*

You can edit the resolution details against an inspection by clicking the  **Edit** button against the inspection. The screen will open a panel showing you the following information:

- *Service Date*
- *Position*
- *Resolution Note*
- *Resolution Reason*

You can edit the resolution note and reason, selecting from a drop-down list of reasons.

If you want to create a scheduled callout for this vehicle, then you can click the  **Create Order** button. The screen will take you to the Call Logging screen and create an order for you for this vehicle at this location with most details pre-configured for you, to book this with the customer.

